


Instructions for Clean Line Foaming Dispenser

Read complete instructions before proceeding

TAPE MOUNTING

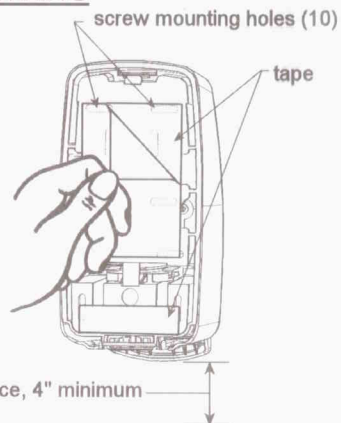

Extreme caution must be exercised to insure mounting surface is flat, free of imperfections, clean and dry. Tape mounting is only recommended for mirrors, or other similar flat surfaces free of imperfections.

- A. Clean flat surface with the provided towelette or other surfaces with an abrasive cleanser prior to using the towelette (depending on surface condition).
- B. Dry surface thoroughly.
- C. Make sure the dispenser is level before fixing it to its final position. Leave at least 4" clearance between the bottom of the dispenser and the closest obstacle.
- D. Remove protective backing from the mounting tape as shown.
- E. Firmly press the dispenser against the mounting surface for 10 seconds. Open the dispenser cover and press directly on the back plate for an additional 30 seconds. Allow 24 hours before loading the unit.

*To open the dispenser, push upwards on the latch release button at the center of the back plate. With your other hand, gently pull the cover away from the wall. See illustration at right.




SCREW MOUNTING

Screw mounting is recommended for surfaces that do not meet the standards set forth for Tape Mounting in the section above.


- A. Hold the dispenser against the wall in the desired position. There must be at least 4" of clearance between the bottom of the dispenser and the nearest obstacle. Make sure the dispenser is level.
- B. Open the dispenser and mark the screw hole location on the wall. (Follow the instructions in the previous section to open the dispenser)
- C. Remove the dispenser from the wall and drill holes in the location you just marked. Use the appropriate drill size for #10 x 1" self tapping screws.
- D. Place appropriate sized anchors into the newly drilled holes. The anchors must be placed so they are flush against the wall.
- E. Place the open dispenser on to the wall and align it with the newly drilled holes. Insert and carefully tighten #10 x 1" self tapping screws through the screw mounting holes in the dispenser back plate. Be sure not to over-tighten the screws.

LOADING INSTRUCTIONS

1. Remove the shipping cap from the pump and, if needed, align the bottom edge of the pump so it is parallel with the bottom seal of the bag (see picture at below right).

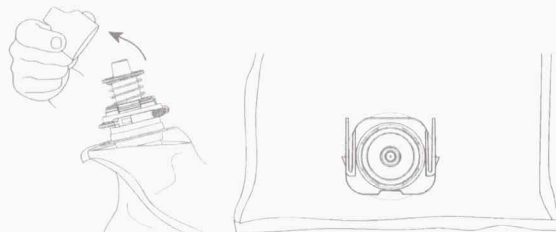


2. Open the dispenser by pushing the latch button upwards and gently pulling the cover away from the wall.

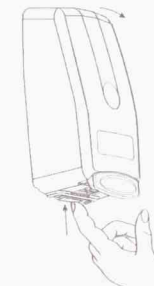

3. Place the bag into the open dispenser and press the pump firmly into place. The bag should rest behind the tabs on the dispenser walls. The pump should slide into the slotted nest, with the textured latch arms facing out.

TABS

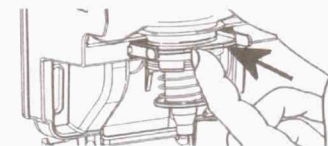

4. Tuck excess bag into the dispenser.



5. Close the dispenser, making sure not to pinch the bag.



* To remove empty bag and pump, squeeze the latch points on the pump while pulling the pump and bag out of the dispenser.

